

**THE
SHARPER
IMAGE®**

Deluxe Ultrasonic Jewelry Cleaner & Tarnish Remover

SI814 Instructions

SHARPER IMAGE DESIGN®

Read and save these instructions.



Dear Sharper Image Customer,

Thank you for your purchase! We appreciate your business very much.

This item was created by Sharper Image Design, our company's own product development group. Please accept my personal assurance of your complete satisfaction with this product's quality and performance.

We offer generous return privileges and excellent warranties on all our products.

For more than 25 years, The Sharper Image has shared the fun of discovering innovative products that make life better and more enjoyable. We've been in business a long time because we are an exciting place to shop and — just as importantly — we strive to deliver great customer service that exceeds your expectations.

Enjoy your purchase!

Respectfully,

A handwritten signature in black ink, reading "Richard". The script is fluid and cursive, with a large initial "R".

Richard Thalheimer

Founder, Chairman and Chief Executive Officer

*Call 1-800-344-4444 for 24-7 ordering and customer service,
or go to **www.sharperimage.com**, our complete online store.*

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be observed, including the following:

READ ALL INSTRUCTIONS BEFORE USING.

KEEP AWAY FROM WATER.

DANGER — As with most electrical appliances, electrical parts are electrically live even when the switch is off.

To reduce the risk of death by electrical shock:

- Always unplug this unit immediately after using.
- Do not place or store appliance where it can fall or be pulled into a tub or sink.
- Do not place or drop into water or other liquid.
- If appliance falls into water, unplug it immediately. Do not reach into the water while the unit is plugged in.
- There are no user-serviceable parts. If the unit becomes damaged in any way, please return it to The Sharper Image for service.

SAVE THESE INSTRUCTIONS

IMPORTANT SAFETY INSTRUCTIONS

WARNING — To reduce the risk of burns, electrocution, fire or injury to persons:

- An appliance should never be left unattended when plugged in.
- Close supervision is necessary when this appliance is used by or near children, or physically-challenged persons.
- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
- Never operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been dropped or damaged, or dropped into water. Return the appliance to a service center or place of purchase for examination and repair.
- Keep the cord away from heated surfaces. Do not wrap the cord around the appliance.

SAVE THESE INSTRUCTIONS

IMPORTANT SAFETY INSTRUCTIONS

- Before filling, unplug the unit. Do not overfill.
- Never use without proper volume of liquid in the cleaning tank. Do not operate with the tank empty.
- The base of the unit may be hot during use. Allow it to cool before handling.
- Do not use an extension cord with this appliance.
- Do not operate with a voltage converter.
- Do not operate if the cleaning chamber or the main housing has cracks or appear damaged.

This appliance is intended for HOUSEHOLD USE ONLY. This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized plug outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

SAVE THESE INSTRUCTIONS


ALCI Safety Plug

Check safety plug with each use or if appliance stops working:

This appliance is provided with a protective device (ALCI) that may make the appliance inoperable under some abnormal conditions (such as immersion of the unit). This device is equipped with a TEST button so that its operation can be checked. To ensure the plug is safe, it should be checked each time the product is used.

Note: Due to individual styling, the appearance of the Safety Plug will vary from the illustration.

- Plug into the power outlet.
- Press the **RESET** button.
- Press the **TEST** button. The RESET button should pop up.
- For use, press the **RESET** button again. Do not use if the test fails.
- If the plug fails or immersion occurs, this unit should be brought to a service center for examination and repair. Do not attempt to use it again.

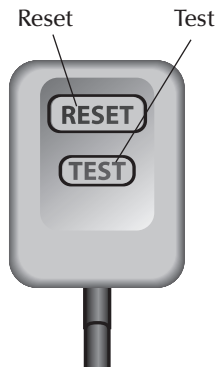

General Instructions

Basic Description

The Deluxe Ultrasonic Jewelry Cleaner has two interchangeable chambers that can be used with the Gem and Jewelry solution, specially formulated for use with an ultrasonic device.


In addition, the larger of the two chambers can be used with Silver Dip, to remove tarnish. Using the extendable dipping basket, quickly dip, remove and rinse pieces of silver, copper or bronze.

Do not use silver dip with the ultrasonic cleaning operation.

Watch and Accessory
Tray



Adapter Ring for
Small Watches

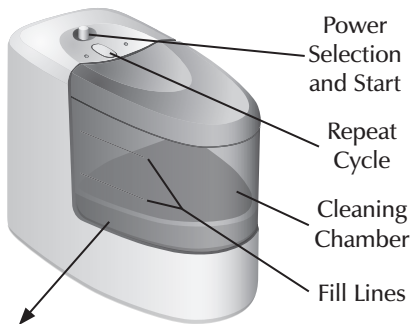

The interchangeable chambers slide from the base to make it easy to fill or empty the cleaning solution as needed.

Using the Ultrasonic Cleaner

Do not use this product with any fragile or soft stones (example: emeralds, pearls, opals, amber, etc.) Also, the ultrasonic waves produced by this product could loosen jewelry that has been set with glue and is not recommended for these types of settings.

For best results, refer to instructions on cleaning-concentrate bottle for proper dilution. **Never use the concentrate at full strength.** Always keep the liquid level above the MIN FILL line and below the MAX FILL line as indicated on the chamber's case.

Place larger items (except watches) directly into the cleaning chamber.

For easier recovery, individual small items can be placed inside the accessory tray.

To protect jewelry surfaces, do not place multiple items in the tank or the tray.

Watch bands can be suspended in the tray, holding the watch out of the liquid. An adapter piece is included for small watches. (Snap into the center of the tray.)

Ask your jeweler to confirm if a plated surface is safe for ultrasonic cleaning.


Operating the Ultrasonic Cleaner

CAUTION: Allow the unit to cool between uses; 10 minutes for HIGH and 3 minutes for NORMAL. **Never operate this unit without liquid in the chamber.**

1. Plug the cord into a polarized outlet.
2. Switch to **NORMAL** or **HIGH**. (Normal is less aggressive on stones and settings.)
3. The unit pulses for 5 minutes then shuts off automatically.
4. The cleaning cycle can be repeated by pressing **REPEAT CYCLE**. (To interrupt and manually stop the cycle, press again.)
5. Remove jewelry and dry with a soft cloth.
6. Replace solution as needed.

Examine the housing and cleaning chamber between uses. Do not use if there is any sign of cracking, leaking or other damage.

POWER SPECIFICATIONS: AC 120V 60Hz 20W

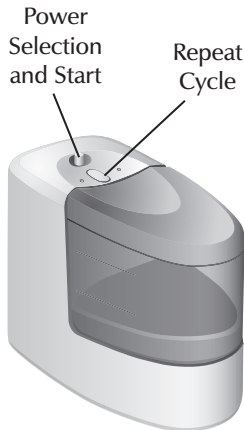

Use as a Dipping Tank

CAUTION:

- Read label on dipping-solution bottle for important warnings.
- **Do not use silver dip for ultrasonic cleaning.**

1. Fill the large chamber tank with silver dip to the MAX FILL level.
2. To quickly dip tarnished pieces, use the dipping basket.
3. Rinse under water and buff dry with a soft cloth.

The large tank has a sealed lid, allowing either solution to be stored directly in the tank with minimal evaporation.

Do not mix the silver dip with other cleaning solutions. Before using the large chamber tank for ultrasonic cleaning, wash and rinse it.

Full One-Year Warranty

What Is Covered

This warranty covers any defects in materials or workmanship, with the exceptions stated below.

How Long Coverage Lasts

This warranty runs for one year from the date of original purchase.

What Is Not Covered

This warranty does not cover damage caused by misuse or use other than as intended and described in the product instruction manual.

What The Sharper Image Will Do

The Sharper Image will repair any defects in materials or workmanship. In the event repair is not possible, The Sharper Image will either replace this product with one of similar features and price, or refund the full purchase price of the product, whichever you prefer.

How to Obtain Service

Return the product and receipt, along with a brief explanation of the problem, to:

T.S.I. - Returns Department
2901-A West 60th Street
Little Rock, AR 72209

If you have questions please feel free to contact our customer service representatives at 1-800-344-5555 or by email at care@web.sharperimage.com.

This warranty gives you specific legal rights, and you may have other legal rights that vary from state to state.

© 2005 Sharper Image Corporation

Sharper Image Corporation
650 Davis St., San Francisco, CA 94111
(415) 445-6000

Shop online: **www.sharperimage.com**

Due to continuing improvements, actual product may differ slightly from the product described herein.

V2 09/05